

DLP TRUNKING SYSTEMS FOR INSTALLATION

SELECTION CHART FOR INSTALLATION TRUNKING AND ACCESSORIES*

Selection of criteria		Trunking		SELECTION CHART OF ACCESSORIES							ADDITIONAL ACCESSORIES																		
Section (mm) and Cat.Nos	No of compartments	Covers width	Flexible (1)	Joints for cover	Base joint	Clips	Partitions		End caps	Internal angles (2) Angles 90 ± 5°		External angles (2)		VDI acces. (2)	Flat angles		Internal angles(2)				Junctions								
							Separation	Division		Angles	Partition junction	Angles	Partition junction		Angles	VDI acces. (2)	Angles	Partition junction	Angles	Partition junction	VDI Acces. (2)	Junctions 3 D	Flat junctions		Junctions to floor	Junctions for change of plane			

* For packing, see cat. number index (p. 8 to 27). (1) If the profile is > 100 mm and < 200 mm, put 2 accessories and if > 200, put 3. (2) When used with accessories please consult table of capacities p. 476