

# adaptable DLP trunking 50 x 150

## trunking and fittings

### Cat.Nos for 50 x 150 trunking



Compatible ranges

Selection chart (p. 825)  
Wiring capacity chart (p. 839)

Pack	Cat.Nos	Trunking	Pack	Cat.Nos	Angles and end caps (continued)												
10	<table border="1"> <tr> <td>1 comp. Cover 130 <b>A</b></td> <td>2 comp. Cover 65 <b>B</b></td> </tr> <tr> <td colspan="2">104 32<sup>(1)</sup></td> </tr> </table>	1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>	104 32 <sup>(1)</sup>		<p>Suitable for a wide range of requirements and applications:</p> <ul style="list-style-type: none"> <li>- Distribution: large wiring capacity and wide access to the wiring space</li> <li>- Installation: can be used with ranges: Mosaic, Arteor, Lexic...</li> </ul> <p><b>Body</b> 50 x 150 mm Supplied without cover Length 2 m</p> <p><b>Flexible covers</b> Fit on to the whole trunking including in internal or external angles Length 2 m</p> <ul style="list-style-type: none"> <li> Partial cover width 65 mm</li> <li> Full cover width 130 mm</li> </ul> <p><b>Partitions</b> Length 2 m</p> <ul style="list-style-type: none"> <li> Division partition, for fitting partial covers</li> <li> Separation partition</li> </ul> <p><b>Joints</b></p> <ul style="list-style-type: none"> <li> Body joint For aligning bases during installation</li> <li> Body joint, attached with adhesive (fit at the end of installation)</li> <li> Cover joint</li> </ul>	<table border="1"> <tr> <td>1 comp. Cover 130 <b>A</b></td> <td>2 comp. Cover 65 <b>B</b></td> </tr> <tr> <td>10</td> <td>106 22</td> </tr> <tr> <td>5</td> <td>106 35</td> </tr> <tr> <td>5</td> <td>107 89</td> </tr> <tr> <td>10</td> <td>107 03</td> </tr> </table> <ul style="list-style-type: none"> <li> Changeable external bend, from 60° to 120° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings</li> <li> Changeable external bend, from 60° to 120° for 50 x 150 and 50 x 195 mm trunkings</li> <li> 90° flat angle</li> <li> Left or right end cap</li> </ul>	1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>	10	106 22	5	106 35	5	107 89	10	107 03
1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>																
104 32 <sup>(1)</sup>																	
1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>																
10	106 22																
5	106 35																
5	107 89																
10	107 03																
20	105 24 <sup>(1)</sup>	<p><b>Partitions</b> Length 2 m</p> <ul style="list-style-type: none"> <li> Division partition, for fitting partial covers</li> <li> Separation partition</li> </ul> <p><b>Joints</b></p> <ul style="list-style-type: none"> <li> Body joint For aligning bases during installation</li> <li> Body joint, attached with adhesive (fit at the end of installation)</li> <li> Cover joint</li> </ul>	<table border="1"> <tr> <td>5</td> <td>107 35</td> </tr> <tr> <td>5</td> <td>107 37</td> </tr> <tr> <td>5</td> <td>107 36</td> </tr> <tr> <td>5</td> <td>107 63</td> </tr> </table> <p><b>Junctions</b></p> <p><b>Flat junctions</b></p> <ul style="list-style-type: none"> <li> To tap-off to an 80 mm wide trunking</li> <li> To tap-off to a 105 mm wide trunking equipped with a 65 mm cover</li> <li> To tap-off to a 105 mm wide trunking equipped with an 85 mm cover</li> </ul> <p><b>Angled junction</b></p> <ul style="list-style-type: none"> <li> To tap-off in an internal angle to 35 x 80, 35 x 105, 50 x 80 or 50 x 105 mm trunking Used with an internal angle Cat.No 106 02 or 106 06</li> </ul>	5	107 35	5	107 37	5	107 36	5	107 63						
5	107 35																
5	107 37																
5	107 36																
5	107 63																
10	<table border="1"> <tr> <td>1 comp. Cover 130 <b>A</b></td> <td>2 comp. Cover 65 <b>B</b></td> </tr> <tr> <td colspan="2">106 02</td> </tr> </table>	1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>	106 02		<p><b>Angles and end caps</b></p> <p><b>Internal and external bends</b> Include the 2 components for the top and bottom of the trunking and 1 partition junction to ensure continuity of partitions and to hold the cover in place for the 2 compartments trunking only</p> <ul style="list-style-type: none"> <li> Changeable internal bend, from 85° to 95° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings</li> <li> Changeable internal bend, from 85° to 95° for 50 x 150 and 50 x 195 mm trunkings</li> </ul>	<table border="1"> <tr> <td>1 comp. Cover 130 <b>A</b></td> <td>2 comp. Cover 65 <b>B</b></td> </tr> <tr> <td>50</td> <td>106 86</td> </tr> <tr> <td>100</td> <td>308 81</td> </tr> </table> <p><b>Accessories</b></p> <ul style="list-style-type: none"> <li> Clip</li> <li> Base for clamp</li> </ul>	1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>	50	106 86	100	308 81				
1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>																
106 02																	
1 comp. Cover 130 <b>A</b>	2 comp. Cover 65 <b>B</b>																
50	106 86																
100	308 81																
5	106 06	<p><b>Angles and end caps</b></p> <p><b>Internal and external bends</b> Include the 2 components for the top and bottom of the trunking and 1 partition junction to ensure continuity of partitions and to hold the cover in place for the 2 compartments trunking only</p> <ul style="list-style-type: none"> <li> Changeable internal bend, from 85° to 95° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings</li> <li> Changeable internal bend, from 85° to 95° for 50 x 150 and 50 x 195 mm trunkings</li> </ul>	<p><b>Installation accessories</b> (p. 836-838)</p>														

(1) Number of metres in pack